

## QC-805P PSTC Tape Initial Adhesion Tester

### Standard

---

PSTC-6

### Description

---

Before test, use solvent clean runway and steel ball surface, stick width 1 inch x length 15inch's tape in the front of runway, use clean and dry clip, put steel ball above release bar, release steel ball to let it roll directly through until stop on the specimen and then measure distance, getting average value after five times tests.


### Industry

---

Tape

### Appearance

---

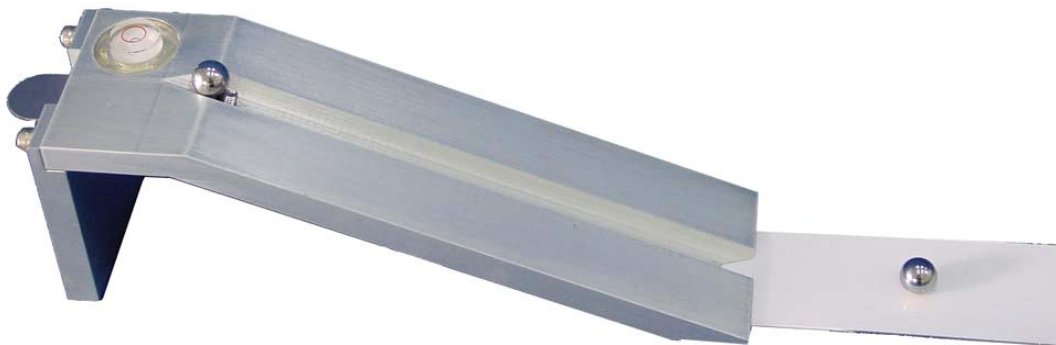

## Specification

---

Model	QC-805P
Slope angle	21.3°
Ball diameter	$\Phi 7/16$ inch $\times$ 3 $\Phi 7/32$ inch $\times$ 5
Slope length	6.5 inch
Dimension	23 $\times$ 6 $\times$ 7 cm
Weight	800 g

## Related Product

---

QC-801 Tape Holding Power Tester (Normal Type)

QC-802 Tape Holding Power Tester (Heating Type)

QC-803A Manual Roller

QC-803J Motor Roller (With speed setting function),

QC-803K Motor Roller

QC-805 Tape Initial Adhesion Tester

QC-508M1 Computerized Material Testing Machine (Tape Peeling Tester)

Version 1<sup>st</sup>, 2013

---



COMETECH TESTING MACHINES CO.,LTD.

No.49,Ln,39,Liancun Rd, Fengyuan Dist, Taichung City420,Taiwan

Tel/886-4-25368881 Fax/886-4-25368883

e-mail/sales@come-tech.com.tw [www.come-tech.com.tw](http://www.come-tech.com.tw)